





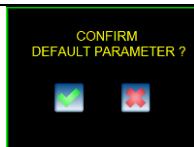
LOAD CELL CALIBRATION

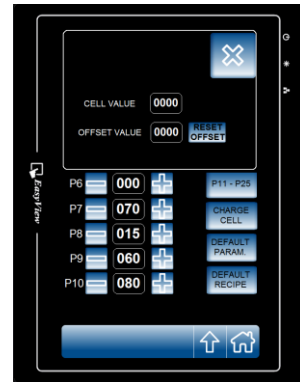


Pressing the icon  it is possible to access to the window which shows the setting of the load-cell (extensionmeter) to check the appropriate working and setting (display).

Keep pressed the icon  till the displayed value will keep a stable value, it is possible to make the “tuning” of the zero of the load-cell (extensionmeter), pressing the icon .

The appropriate setting must display a value of 330 ± 30 .



Pressing this icon, it will be possible to set the machine’s internal parameters to default values (producer setting)

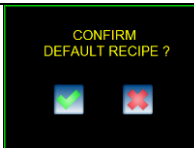

Pressing this icon, it will be possible to set the machine’s packing cycles parameter (recipe) to default values (producer setting).